BATHROOM

Bathroom Cabinet

Fitting Instructions

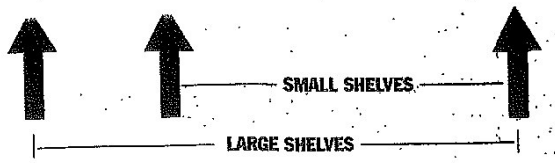

Shelf support centres

Fixing pack contents:

Fixing screws 

Wall plugs

Screw cups

Contents will vary depending on cabinet design

Tools Required

Drill
6mm (no. 10) masonry drill bit
6mm (no. 10) ceramic drill bit (optional)
Screwdriver
Pencil

KEEP DIY TOOLS OUT OF THE REACH OF CHILDREN

Accessory Pack contents:

(where applicable)
1 x handle
2 x screws

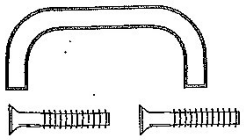

(where applicable)
1 x knob
1 x screw

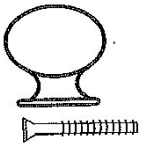

Contents will vary depending on cabinet design, handles/knobs are only included where required.

DATUM EDGE

Home Safety Advice:

Before drilling check for hidden cables and pipe work. If you are using electric tools take extreme care of any surplus water in the vicinity of the working area. The working area should be completely dry. It is advisable to use a residual current circuit breaker.
IT IS RECOMMENDED THAT TWO PEOPLE FIT THE CABINET TO ENSURE IT IS FITTED SAFELY.

Fitting Instructions:

1. Hold the cabinet against the wall in the desired position. Use a spirit level to ensure that the cabinet is level.
2. Open the cabinet door and mark through the holes in the back using a pencil. Remove the cabinet from the wall.
3. Using a 6mm (no. 10) masonry drill bit, drill the holes in the marked positions to a depth of 33mm.
4. Insert the wall plug flush to the surface of the wall. If fitting to a tiled surface, the wall plug should be inserted below the surface of the tile.
5. Hold the cabinet against the wall and line the holes in the back of the cabinet with the wall plugs.
6. Locate the screws and screw cups into the wall plugs through the back of the cabinet. Always fit the top screws first to support the cabinet whilst fixing.

The top edges of the doors can be aligned to each other by loosening the hinge side brackets as required.
Tasks 1,2,5 and 6 may require two people.

Shelf Fixing:

(where applicable)

1. Establish desired shelf height(s).
2. Using the instruction leaflet as a template, fold the leaflet to desired fixing height for the shelf, ensuring that the folded edges are square. This will ensure that the top and bottom of the template are parallel.
3. Place datum edge (as labelled) against the backing board inside the cabinet and using the two shelf support centers (as labelled), mark the shelf support centers.

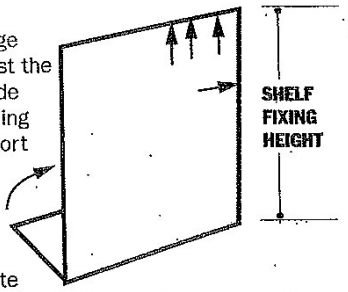

4. Remove template and carefully knock in shelf supports. Repeat the process for the opposite side.

Product Care:

- To retain the best quality finish clean the cabinet regularly with a soft cloth and mild detergents.
- Do not use abrasive cleaners, as these will damage the product.
- Natural timbers and veneers mature in normal lighting conditions. Colour variations will occur giving each product a more individual appearance.

Croydex Limited. Central way, Andover, Hampshire, SP10 5AW, UK.